

AD NO.
TECOM PROJECT NO. 7-CO-IL2-TT2-001
USATTC REPORT NO. 830101

FUNGI ASSOCIATED WITH MATERIALS' BIODETERIORATION
IN THE HUMID TROPICS

BY


DR. WILLIAM A. DEMENT

Matériel Test Division

UNITED STATES ARMY TROPIC TEST CENTER

APO Miami 34004

January 1983

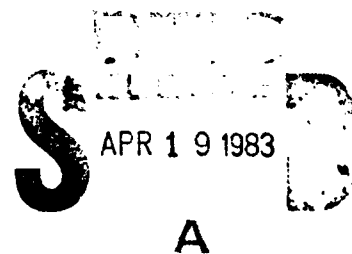

Approved for public release, distribution unlimited.

DTIC FILE COPY

83 04 19 052

ADA 126913

Disposition Instructions

Destroy this report when no longer needed. Do not return to the originator.

Disclaimer

The views, opinions, and findings in this report are those of the authors and should not be construed as an official Department of the Army position, unless so designated by other official documentation.

Neutral Language Statement

The word "he," when used in this report, represents both the masculine and feminine genders, unless otherwise specifically stated.

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER TECOM Project No. 7-CO-IL2-TT2-001	2. GOVT ACCESSION A126 912	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) Fungi Associated with Material's Biodeterioration In The Humid Tropics	5. TYPE OF REPORT & PERIOD COVERED In-House Laboratory Research Final Report	
	6. PERFORMING ORG. REPORT NUMBER USATTC Report No. 830101	
7. AUTHOR(s) Dr. William A. Dement	8. CONTRACT OR GRANT NUMBER(s)	
9. PERFORMING ORGANIZATION NAME AND ADDRESS US Army Tropic Test Center ATTN: STETC-MTD-P APO Miami 34004	10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS	
11. CONTROLLING OFFICE NAME AND ADDRESS US Army Test and Evaluation Command ATTN: DRSTE-AD-M Aberdeen Proving Ground, MD 21005	12. REPORT DATE January 1983	
	13. NUMBER OF PAGES 14	
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)	15. SECURITY CLASS. (of this report) UNCLASSIFIED	
	15a. DECLASSIFICATION/DOWNGRADING SCHEDULE	
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Biodeterioration Deuteromycetes (Imperfect Fungi) Electron Microscopy Fungi Fungus Deterioration Microbiology Test Methods Tropical Deterioration Tropical Regions Tropical Tests		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) Swab sampling methods, commonly used in field microbiological inspections of equipment tested in the humid tropics, were found to provide an inaccurate indication of fungi that grow actively on a test item.		

DD FORM 1 JAN 73 1473

EDITION OF 1 NOV 65 IS OBSOLETE

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

TABLE OF CONTENTS

	PAGE
I. BACKGROUND	1
II. OBJECTIVE	1
III. MATERIAL AND METHODS	1
IV. RESULTS	3
V. DISCUSSION	3
VI. CONCLUSION	4



Accession For	
THIS GRA&I	
DTIC TAB	
Unannounced	
Justification	
By	
Distribution/	
Availability Codes	
Avail and/or	
Dist	Special
A	

I. BACKGROUND

Field microbiological inspections of equipment on test at US Army Tropic Test Center (USATTC) have historically involved the use of swab sampling techniques to evaluate areas of suspected fungal growth. The swab samples were returned to the laboratory and used to prepare cultures from which different fungal species could be isolated and identified. A potential problem with this method of inspection results from the fact that surfaces exposed in the humid tropics are contaminated with a wide variety of organic materials including fungal spores. The swab sampling procedures can pick up contaminant spores along with spores from species actually growing on the test item. If these contaminant spores belong to species which grow rapidly in culture and are able to outcompete the species causing degradation, then false identifications of degrading species might be made.

A second problem is also caused by contaminant spores. These spores can be picked up from surfaces that are not supporting active fungal growth. An organism will then develop from these spores, grow in culture, and give a false impression that fungal attack is occurring.

Results obtained from microbiological inspections conducted at USATTC support the possibility of incorrectly interpreting data that result from swab sampling. A small number of species have been isolated and identified from the vast majority of swab samples from past test projects. The species found could not generally be related to the nature of the test substrate. The commonly found species were prevalent soil fungi which grow rapidly on culture media. Thus, the organisms identified may represent contaminants which grow well on laboratory culture media, rather than organisms involved in material degradation.

II. OBJECTIVE

Evaluate the validity of results obtained from the use of swab sampling methods in field microbiological inspections.

III. MATERIAL AND METHODS

a. Test Materials: All test materials were obtained from other USATTC test and research projects. The original material examined was a part of the 120mm tank ammunition undergoing tropic exposure. This ammunition had an elastomer obturator band which appeared to be supporting fungal growth. This obturator band material was examined using the procedures described in paragraph IIId. The remaining materials had been exposed as part of a USATTC Methodology Investigation, Tropic Versus CONUS Deterioration Tests.¹ These

¹ Draft, Methodology Investigation: Tropic vs CONUS. Correlation Tests, US Army Tropic Test Center, Fort Clayton, APO Miami 34004, F. Chen and W. A. Dement, TECOM Project No. 7-CO-RD8-TT1-001, USATTC Report No. 820703, unpublished.

materials were exposed for 48 weeks at the McKenzie Forest Exposure Site. At the time of the current investigation, the materials had been stored in plastic bags in the laboratory for approximately one year. These materials were POL Collapsible Fuel Tank material, tropicalized cotton jungle fatigue material, cotton, mylar, latex, nylon, and cellulose acetate. Detailed information on these materials can be found in the above referenced Methodology Report.

b. Additional Tropic Exposure: Two of the Tropic Versus CONUS materials (tropicalized cotton and cotton) were subjected to two additional weeks of tropic exposure during the wet season (June 1981) at the Fort Clayton General Purpose Test Area under a jungle canopy.

c. Culture Media: Two types of culture media were used in this investigation. One was carrot decoction agar, which is the standard medium used for growing and isolating fungi at USATTC. It contains a carbon nutrient source and is able to independently support the growth of most soil fungi. The second was mineral salts agar. This medium contains no carbon nutrient source, but supplies all mineral nutrients required for fungus growth. Methods of preparing these media are presented below.

(1) Carrot Agar: Autoclave 35 grams of sliced carrots in 500 milliliters of distilled water for 15 minutes. Filter the carrot extract and add enough distilled water to make 1000 milliliters. Add 15 grams of agar and autoclave for 20 minutes.

(2) Mineral Salts Agar: Combine 0.7 gram of KH_2PO_4 , 0.7 gram of K_2HPO_4 , 0.7 gram of $\text{MgSO}_4 \cdot 7\text{H}_2\text{O}$, 1.0 gram of NH_4NO_3 , 0.005 gram of NaCl , 0.002 gram of $\text{ZnSO}_4 \cdot 7\text{H}_2\text{O}$, 0.002 gram of $\text{ZnSO}_4 \cdot 7\text{H}_2\text{O}$ and 0.001 gram of $\text{MnSO}_4 \cdot \text{H}_2\text{O}$. Add enough distilled water to make 1000 milliliters of solution. Add 15 grams of agar and autoclave for 20 minutes.

d. Examination of 120mm Ammunition Material: This material was examined by swab sampling, direct scanning electron microscopy (SEM), and culture on mineral salts agar.

(1) Swab sampling. Areas of suspected fungal growth on the rubber obturator ring were rubbed with a wet, sterile cotton swab. The swab was taken to the laboratory and used to inoculate sterile carrot decoction agar in a Petri dish. The Petri dish was maintained at room temperature and examined with a light microscope after two to three days and again after one week. The fungi found growing on the Petri dish were identified when possible. If a fungus produced spores but could not be identified, it was described to allow comparisons with data from other methods of analysis. Fungi which did not produce spores were not included in the data.

(2) Direct SEM observation. Small samples (2-4mm by 4-8mm) of rubber obturator band material supporting fungal growth were cut from the ammunition. A sample was mounted on an aluminum SEM stub with colloidal graphite adhesive. The sample was sputter-coated with gold. The sample was

examined with an International Scientific Instruments (SEM). Fungi found on the sample were identified or described if identification was not possible.

(3) Material sampling. Small samples (2-4mm by 4-8mm) of rubber obturator band material supporting fungal growth were cut from the ammunition. These samples were washed gently with a test tube brush in tap water and rinsed three times by shaking in tubes of sterile distilled water. The samples were then transferred to Petri dishes of sterile mineral salts agar. The cultures were maintained at room temperature in the laboratory and examined at weekly intervals for four to six weeks. All fungi found were either identified or described when identification was not possible. Only those fungi growing on or in close proximity to the material sample were included in the list of fungi from a culture.

e. Examination of Tropic Versus CONUS materials. These materials were examined by swab sampling and material sampling. No direct SEM examination was conducted because the samples had been stored for a long period of time in the laboratory and no active fungal growth was present.

(1) Swab sampling. The swab sampling procedures described for the 120mm ammunition material were used for all of these materials except the fabrics. Fabrics were placed in a sterile tube with approximately 2 milliliters of sterile distilled water. The material was agitated in the water with the cotton swab. This swab was then used to inoculate the carrot decoction agar culture.

(2) Material sampling. A 1- by 1-centimeter sample was cut from the material in the same area that was swab sampled. The sample was gently washed in tap water using a test tube brush. It was then rinsed three times by shaking in tubes of sterile distilled water. The sample was transferred to sterile mineral salts agar in a Petri dish and maintained at room temperature in the laboratory. The culture was examined weekly for four to six weeks using an optical microscope. Fungi were either identified or described if identification was not possible.

IV. RESULTS

Table 1 presents the fungi found from each material using the two methods of examination, swab sampling and material sampling. The most prevalent fungi found in a culture are identified by an asterisk. The other fungi were represented by only a few colonies. Results from direct SEM examination of the 120mm ammunition obturator band material surface agreed with the results obtained from the material sampling method. In general, the swab sampling and material sampling methods provided quite different results.

V. DISCUSSION

The material sampling results were used as standards to evaluate the swab sampling methods. The mineral salts medium provides everything that a fungus needs for growth except a carbon nutrient source. The material that is placed

on the mineral salts medium represents the only potential carbon source. Any fungus which grows well in the medium containing the material sample must be using some part of that materials as a carbon nutrient source and thus would represent an organism that was degrading the material in nature. Based on the results in Table 1, swab sampling provides a poor indicator of what fungus species are actually growing on and potentially degrading a test item.

There was some concern that the long laboratory storage of materials from the Tropic versus CONUS project might be a reason for the poor agreement between the two methods. Samples of cotton and tropicalized cotton from the Tropic versus CONUS project were exposed for two weeks at the Fort Clayton General Purpose Test Area in the jungle during the wet season. Swab sampling results indeed showed more species of fungus; however, the fungi were not the same as those found in the mineral salt cultures containing the material sample. The swab samples contained common, fast-growing fungi, e.g. Cephalosporium sp and Rhizopus sp. The mineral salts cultures again showed the presence of Trichoderma sp and Cephalosporium sp. The fungus Fusarium sp was the most common species observed on cotton and was a prevalent organism on tropicalized cotton. It is hypothesized that the long laboratory storage resulted in loss of viability of contaminant spores, but did not affect those organisms that were actively growing with the material as a nutrient source, except for certain species, e.g. Fusarium sp.

VI. CONCLUSION

Swab sampling provides an inaccurate indication of fungi that grow actively on a test item. The preferred method of inspection is to collect material samples suspected of supporting fungal growth, and to analyze these samples in the laboratory by direct SEM examination and by culture study using mineral salts agar. If material samples cannot be taken from the test item and swab sampling is required, tape should be used to pick up suspected fungus colonies from the test item surface. Direct SEM examination of this tape-collected sample will provide data to aid in interpreting swab sampling results. The identification of a fungus from both swab samples and tape-collected samples is evidence that the organism was actively growing on the test item surface.

TABLE 1. FUNGI ISOLATED FROM MATERIAL USING DIFFERENT SAMPLING METHODS

MATERIAL	SAMPLING METHOD	
	Swab Sampling	Material Sampling
120mm Obturator Band	<u>Penicillium</u> sp <u>a/</u> <u>Cladosporium</u> sp <u>a/</u> <u>Monilia</u> sp <u>Pestalotia</u> sp <u>Aspergillus</u> sp Unknown #1	<u>Cephalosporium</u> sp (SEM) <u>b/</u> <u>Verticillium</u> sp (SEM) <u>b/</u> <u>Fusarium</u> sp (SEM) <u>Penicillium</u> sp (SEM) <u>Cladosporium</u> sp (SEM) <u>Streptomyces</u> sp (SEM) <u>Paecilomyces</u> sp Unknown #2 Unknown #3
POL Tank	<u>Cladosporium</u> sp <u>a/</u> <u>Aureobasidium</u> <u>pullulans</u>	<u>Cephalosporium</u> sp <u>Gliocladium</u> sp <u>a/</u>
Tropicalized Cotton	<u>Pestalotia</u> sp <u>a/</u>	<u>Trichoderma</u> sp #1 <u>a/</u> <u>Cephalosporium</u> sp <u>a/</u> <u>Curvularia</u> sp <u>Phoma</u> sp Unknown #2
Tropicalized Cotton (2 weeks additional exposure)	<u>Cephalosporium</u> sp <u>a/</u> <u>Rhizopus</u> sp <u>a/</u> <u>Aureobasidium</u> <u>pullulans</u> <u>Penicillium</u> sp <u>Fusarium</u> sp	<u>Trichoderma</u> sp #1 <u>a/</u> <u>Cephalosporium</u> sp <u>a/</u> <u>Fusarium</u> sp <u>a/</u> <u>Gliocladium</u> sp <u>a/</u> <u>Streptomyces</u> sp <u>Spicaria</u> sp
Cotton	None	<u>Trichoderma</u> sp #2 <u>a/</u> <u>Fusarium</u> sp <u>a/</u> <u>Phoma</u> sp <u>a/</u> <u>Cephalosporium</u> sp <u>Curvularia</u> sp
Cotton (2 weeks additional exposure)	<u>Cephalosporium</u> sp <u>a/</u> <u>Aureobasidium</u> <u>pullulans</u> <u>Trichoderma</u> sp #2 <u>Spicaria</u> sp	<u>Fusarium</u> sp <u>a/</u> <u>Cephalosporium</u> sp <u>a/</u> <u>Trichoderma</u> sp #2 <u>a/</u> <u>Streptomyces</u> sp
Latex	<u>Penicillium</u> sp <u>a/</u> Unknown #3	<u>Curvularia</u> sp <u>a/</u> <u>Penicillium</u> sp <u>a/</u> <u>Cladosporium</u> sp <u>a/</u> <u>Spicaria</u> sp <u>a/</u>
Nylon	<u>Pestalotia</u> sp <u>a/</u> Unknown #1	Unknown #4

Table 1 (concluded)

MATERIAL	SAMPLING METHOD	
	Swab Sampling	Material Sampling
Cellulose Acetate	<u>Pestalotia</u> sp <u>a/</u>	None
Mylar	None	None

a/ Most prevalent fungi found in the culture. Other fungi listed were represented by only a few colonies.

b/ SEM-Identified by direct scanning electron microscope examination of the material.

DISTRIBUTION LIST

<u>Addressee</u>	<u>Final Report</u>
Commandant US Army Chemical School ATTN: ATZN-CM-CT Fort McClellan, AL 36205	1
Commander US Army Electronic Proving Ground ATTN: STEEP-CS Fort Huachuca, AZ 85613	1
Director US Army Research and Technology Laboratories Ames Research Center ATTN: DAVDL-D Moffett Field, CA 94035	1
Director US Army Defense Ammunition Center and School ATTN: SARAC-PC Savanna, IL 61074	1
Commander US Army Armament Materiel Readiness Command ATTN: DRSAR-ASP DRSAR-LE DRSAR-MA-ILS DRSAR-QAL DRSAR-LEP-L Rock Island, IL 61299	1 1 1 1 1
Director US Army DARCOM Field Safety Activity ATTN: DRXOS-ES Charlestown, IN 47111	1
Commander US Army Combined Arms Center ATTN: ATZL-CAT-EO Fort Leavenworth, KS 66027	2

<u>Addressee</u>	<u>Final Report</u>
Commander US Army DARCOM Materiel Readiness Support Activity ATTN: DRXMD-ED Lexington, KY 40511	1
Commander US Army Natick Laboratories ATTN: DRDNA-UAM Natick, MA 01760	1
Director US Army Research Institute of Environmental Medicine ATTN: SGRD-UE-HR Natick, MA 01760	1
Commander US Army Technical Detachment US Naval EOD Center ATTN: DARCOM EOD Staff Officer Indian Head, MD 20640	1
Commander US Army Aberdeen Proving Ground ATTN: STEAP-MT STEAP-MT-S Aberdeen Proving Ground, MD 21005	1 1
Director US Army Ballistic Research Laboratory ATTN: DRDAR-BL Aberdeen Proving Ground, MD 21005	1
Commander US Army Test and Evaluation Command ATTN: DRSTE-CT-T DRSTE-CT-A DRSTE-TO-F DRSTE-TO-I Aberdeen Proving Ground, MD 21005	1 1 1 1

<u>Addressee</u>	<u>Final Report</u>
Director US Army Materiel Systems Analysis Activity ATTN: DRXSY-R DRXSY-MP Aberdeen Proving Ground, MD 21005	1 1
Commander/Director US Army Chemical Systems Laboratory ATTN: DRDAR-CLJ-M DRDAR-CL Aberdeen Proving Ground, MD 21010	10 1
Commander Harry Diamond Laboratories ATTN: DELHD-TD 2800 Powder Mill Road Adelphi, MD 20783	1
Commander US Army Tank-Automotive Command ATTN: DRSTA-QAM DRSTA-CZ Warren, MI 48090	1 1
Commander US Army Aviation Research and Development Command ATTN: DRDAV-DI 4300 Goodfellow Boulevard St. Louis, MO 63120 Commander	4
US Army Aviation Research and Development Command ATTN: DRDAV-EGG St. Louis, MO 63166	1
Commander US Army Armament Research and Development Command ATTN: DRDAR-PMT DRDAR-QA DRDAR-SF DRDAR-TSS Dover, NJ 07801	1 1 1 1

Addressee

Final
Report

Commander
ARRADCOM
Large Caliber Weapon Systems Laboratory
ATTN: DRDAR-LC
Dover, NJ 02081

1

Commander
US Army Avionics Research and Development Activity
ATTN: DAVAA-DD
Fort Monmouth, NJ 07703

1

Director
US Army Electronic Warfare Laboratory
ATTN: DELEW-D
Fort Monmouth, NJ 07703

1

Commander
ARRADCOM
Fire Control and Small Caliber Weapon
Systems Laboratory
ATTN: DRDAR-SC
Dover, NJ 07801

1

Commander
Combat Surveillance and Target
Acquisition Laboratory
ATTN: DELCS-D
Fort Monmouth, NJ 07703

1

Director
US Army Electronic Technology
and Devices Laboratory
ATTN: DELET-D
Fort Monmouth, NJ 07703

1

Commander
US Army White Sands Missile Range
ATTN: STEWS-SC
STEWS-TE-P
White Sands Missile Range, NM 84022

1

1

Commander
US Army TRADOC Combined Arms
Test Activity
ATTN: ATCT-MA
Fort Hood, TX 76544

1

<u>Addressee</u>	<u>Final Report</u>
Commander US Army Dugway Proving Ground ATTN: STEDP-MT-DA-T STEDP-SD Dugway, UT 84022	1 1
Commander US Army Operations Test and Evaluation Agency ATTN: CSTE-P00 5600 Columbia Pike Falls Church, VA 22041	2
Director Night Vision and Electro-Optics Laboratories ATTN: DELNV-RM Fort Belvoir, VA 22060	1
Commander US Army Engineer Topographic Laboratories ATTN: ETL-GS-E Fort Belvoir, VA 22060	1
Commander US Army Mobility Equipment Research and Development Command ATTN: DRDME-TQI DRDME-ZS Fort Belvoir, VA 22060	2 1
Administrator Defense Technical Information Center ATTN: DDA Cameron Station Alexandria, VA 22314	2
Commander US Army Materiel Development and Readiness Command ATTN: DRCQA-S DRCSM-ID DRCDE-S DRCDE-PIP DRCDF 5001 Eisenhower Avenue Alexandria, VA 22333	1 1 1 1 1

Addressee

Final
Report

Director
Signals Warfare Laboratory
ATTN: DELSW-D
Warrenton, VA 22186

1

Commander
US Army Foreign Science and
Technology Center
ATTN: DRXST-IS-1
220 Seventh Street, NW
Charlottesville, VA 22901

1

Commander
US Army Cold Regions Test Center
ATTN: STECR-OP-PM
STECR-MT
APO Seattle 98733

1

1

Commander
US Army Tropic Test Center
ATTN: STETC-MTD
STETC-MTD-P
STETC-MTD-T
STETC-MTD-A
STETC-MTD-O (TIC)
STETC-MTD-O (Tech Ed)
STETC-MD-W
APO Miami 34004

1

10

5

2

5

2

2

END

DATE
FILMED

5 - 83

DTIC